



Quick-Start Audio Conversion Guide

Listening

Press the PHONO/TAPE/AUX button to switch between Record, Tape, and Cassette.

- Phono- Record (Select speed- 33,45, 78)
- Tape-Cassette
- AUX- External Unit
- Press the 'CD' button to listen to a CD

Important Before Recording

- Track cannot be shorter than 10 seconds.
- Once you have recorded on a CD-R, the data cannot be erased. You can unfinalize a CD-RW to add additional tracks.
- If the STOP button or PLAY/PAUSE button is pressed within 10 seconds from the beginning of the recording, the unit does not stop recording.
- If the disc reaches the end during recording, the unit finalizes the disc automatically and stops.
- When a partially recorded disc is inserted, recording starts after the last recorded track.
- When the TRACK INCREMENT button is pressed while recording, the recorded sound will be cut for a moment. Do not use the TRACK INCREMENT function while the music sound continues.

Recording to a CD

1. Press the PHONO/TAPE/AUX button to switch between Record, Tape, and Cassette to select the correct source.
2. Load a CD-R or CD-RW disc into the unit.
3. Place a tape in the cassette holder or a record on the turntable.
 - Select a speed for the record.
4. Press the RECORD button. The red indicator will blink and enter record pause mode. 'REC' will blink on the display.
5. Prepare the recording source when ready to begin:

- Move the tone arm of the record player to the record and slowly put down.
 - Press 'PLAY' on the cassette player. Make sure the cassette is set where you want to begin recording. You may need to rewind or fast-forward.
6. Press the PLAY/PAUSE button to start recording the source. Press the STOP button to stop recording.
 - Press the PLAY/PAUSE button to pause the recording. Press again to restart the recording.
 - A new track number will be added each time it is paused or stopped. You cannot start and stop within a track.
 - Manually divide tracks by pressing the TRACK INCREMENT button during the recording. The sound will cut for a moment and create a new track.

Finalizing the CD

1. Press the 'CD' button to select CD.
2. With the CD in the player, press the FINALIZE/ERASE button. FINAL will appear in the display. You may cancel by pressing the 'stop' button.
3. Press the ENTER button to start finalizing. Times may vary. The display returns to the track/time display when complete.

Recording to the Computer

1. Open Audacity on the desktop.
2. Press the PHONO/TAPE/AUX button to switch between Record, Tape, and Cassette to select the correct source.
3. Place a tape in the cassette holder or a record on the turntable. Select a speed for the record.
4. Prepare the recording source when ready to begin:
 - a. Move the tone arm of the record player to the record and slowly put down.
 - b. Press 'PLAY' on the cassette player. Make sure the cassette is set where you want to begin recording. You may need to rewind or fast-forward.
5. Press the 'record' button (red circle) at the top in Audacity to start recording the source.
6. Press the 'stop' button (yellow square) at the top to stop the recording. Press the 'play' button (green arrow) at the top to play what has just been recorded.
7. To save to a USB drive:

Click File >> Export Audio >> Name file and choose a file type (ex. WAV, MP3) >> Export